


ALS-20 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004587	Main body	612	26120054	Key washer
105	21056616	Pinion bearing fixed bushing	700	27000439	Drive gear
105	21050130	Pinion bearing fixed bushing	702	27020945	Pinion gear
108	21081576	Cap	705	27050220	Transmission gear
200	22004668	Side plate	708	27080190	Oscillating slider
300	23005236	Rotor	716	27160016	Oscillation slider plate
301	23012348	Bail arm	718	27180804	Main shaft
304	23042892	Bail arm cover	719	27190029	Click gear
305	23050235	Kick lever	722	27220009	Click gear washer
307	23071911	Bail holder	800	28000332	Anti-reverse/anti-re lever
309	23090002	Bail arm slider	800	28000402	Anti-reverse/anti-re lever
310	23100005	Compression spring	801	28010024	Anti-re lever spring
313	23131881	Bail wire assy.	0910618	0910618	One way assy.
315	23150086	Line roller	0910049	0910049	Ball bearing
316	23160014	Line roller bushing	0910039	0910039	Ball bearing
317	23170014	Line roller washer	0920590	0920590	Washer
318	23180006	Rotor nut	0920136	0920136	Washer
400	240016104	Spool assy.	0930058	0930058	Screw
405	24050042	Drag washer retainer	0930541	0930541	Screw
407	24070009	Extension spring	0930641	0930641	Screw
412	24120038	Spool bushing	0930964	0930964	Screw
500	25006551	Handle assy.	09301327	09301327	Screw
513	25130916	Handle cap	0930209	0930209	Screw
515	25150002	Handle screw cap washer	09301262	09301262	Screw
600	26004380	Drag knob assy.	09301454	09301454	Screw

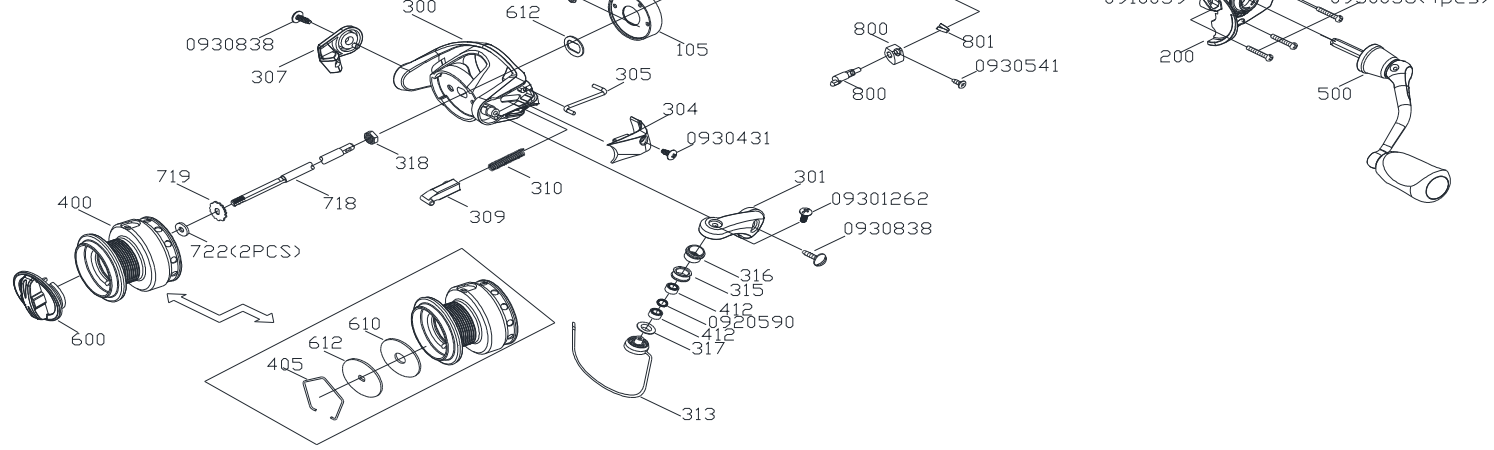

ALS-20 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
610	26100011	Drag washer	0930431	0930431	Screw
612	26120003	Key washer	0930838	0930838	Screw

209OKM11201201