


ALS-30 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004563	Main body	700	27000240	Drive gear
105	21050012	Pinion bearing fixed plate	702	27020932	Pinion gear
105	21056571	Pinion bearing fixed plate	705	27050143	Transmission gear
105	21050120	Pinion bearing fixed bushing	708	27080121	Oscillating slider
108	21081569	Cap	716	27160016	Oscillation slider plate
200	22004649	Side plate	718	27180732	Main shaft
300	23005215	Rotor	719	27190029	Click gear
301	23012340	Bail arm	722	27220009	Click gear washer
304	23042878	Bail arm cover	800	28000437	Anti-reverse/anti-re lever
305	23050220	Kick lever	800	28000324	Anti-reverse/anti-re lever
307	23071918	Bail holder	801	28010024	Anti-re lever spring
309	23090002	Bail arm slider	0910525	0910525	Ball bearing
310	23100005	Compression spring	0910039	0910039	Ball bearing
313	23131774	Bail wire assy.	0910049	0910049	Ball bearing
315	23150086	Line roller	0910091	0910091	Ball bearing
316	23160014	Line roller bushing	0920310	0920310	Washer
317	23170014	Line roller washer	0920590	0920590	Washer
318	23180006	Rotor nut	0920151	0920151	Washer
400	240016012	Spool assy.	0920237	0920237	Washer
405	24050042	Drag washer retainer	0930058	0930058	Screw
407	24070009	Extension spring	0930541	0930541	Screw
412	24120054	Spool bushing	09301462	09301462	Screw
412	24120021	Spool bushing	09301538	09301538	Screw
500	25006498	Handle assy.	0930438	0930438	Screw
513	25130905	Handle cap	0930471	0930471	Screw
515	25150002	Handle screw cap washer	0930209	0930209	Screw
600	26004380	Drag knob assy.	09301262	09301262	Screw
610	26100011	Drag washer	09301450	09301450	Screw

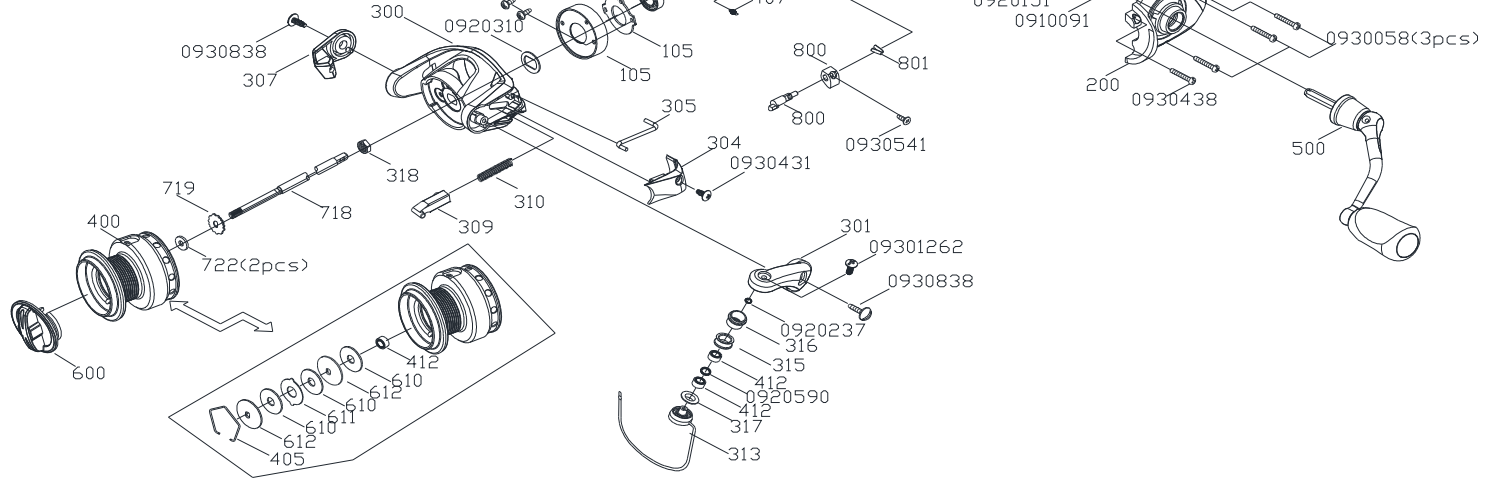

ALS-30 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
611	26110004	Eared washer	0930431	0930431	Screw
612	26120003	Key washer	0930838	0930838	Screw

209OKM11201301