


ALS-40 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004577	Main body	702	27020932	Pinion gear
105	21050012	Pinion bearing fixed plate	705	27050143	Transmission gear
105	21056571	Pinion bearing fixed plate	708	27080121	Oscillating slider
105	21050120	Pinion bearing fixed bushing	716	27160016	Oscillation slider plate
108	21081569	Cap	718	27180732	Main shaft
200	22004649	Side plate	719	27190029	Click gear
300	23005229	Rotor	722	27220009	Click gear washer
301	23012340	Bail arm	800	28000437	Anti-reverse/anti-re lever
304	23042887	Bail arm cover	800	28000324	Anti-reverse/anti-re lever
305	23050234	Kick lever	801	28010024	Anti-re lever spring
307	23071906	Bail holder	0910525	0910525	Ball bearing
309	23090002	Bail arm slider	0910039	0910039	Ball bearing
310	23100033	Compression spring	0910049	0910049	Ball bearing
313	23131878	Bail wire assy.	0910091	0910091	Ball bearing
315	23150086	Line roller	0920310	0920310	Washer
316	23160014	Line roller bushing	0920590	0920590	Washer
317	23170014	Line roller washer	0920151	0920151	Washer
318	23180006	Rotor nut	0920237	0920237	Washer
400	240016088	Spool assy.	0930058	0930058	Screw
405	24050042	Drag washer retainer	0930541	0930541	Screw
407	24070009	Extension spring	09301462	09301462	Screw
412	24120038	Spool bushing	09301538	09301538	Screw
500	25006498	Handle assy.	0930438	0930438	Screw
513	25130905	Handle cap	0930471	0930471	Screw
515	25150002	Handle screw cap washer	0930209	0930209	Screw
600	26004380	Drag knob assy.	09301262	09301262	Screw
610	26100011	Drag washer	09301450	09301450	Screw
611	26110004	Eared washer	0930431	0930431	Screw

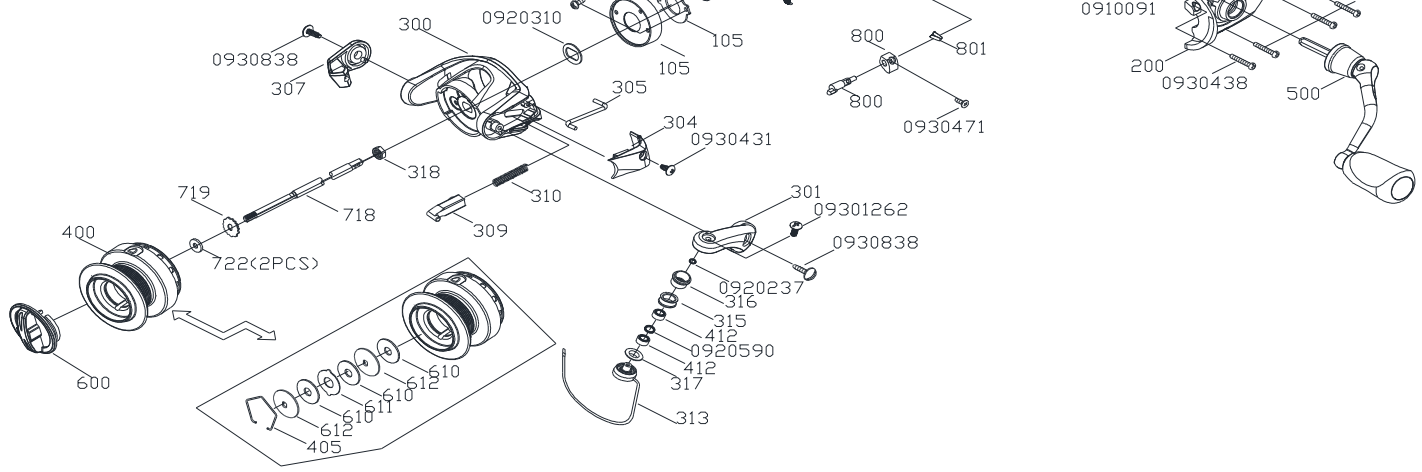

ALS-40 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
612	26120003	Key washer	0930838	0930838	Screw
700	27000240	Drive gear			

209OKM11201401