


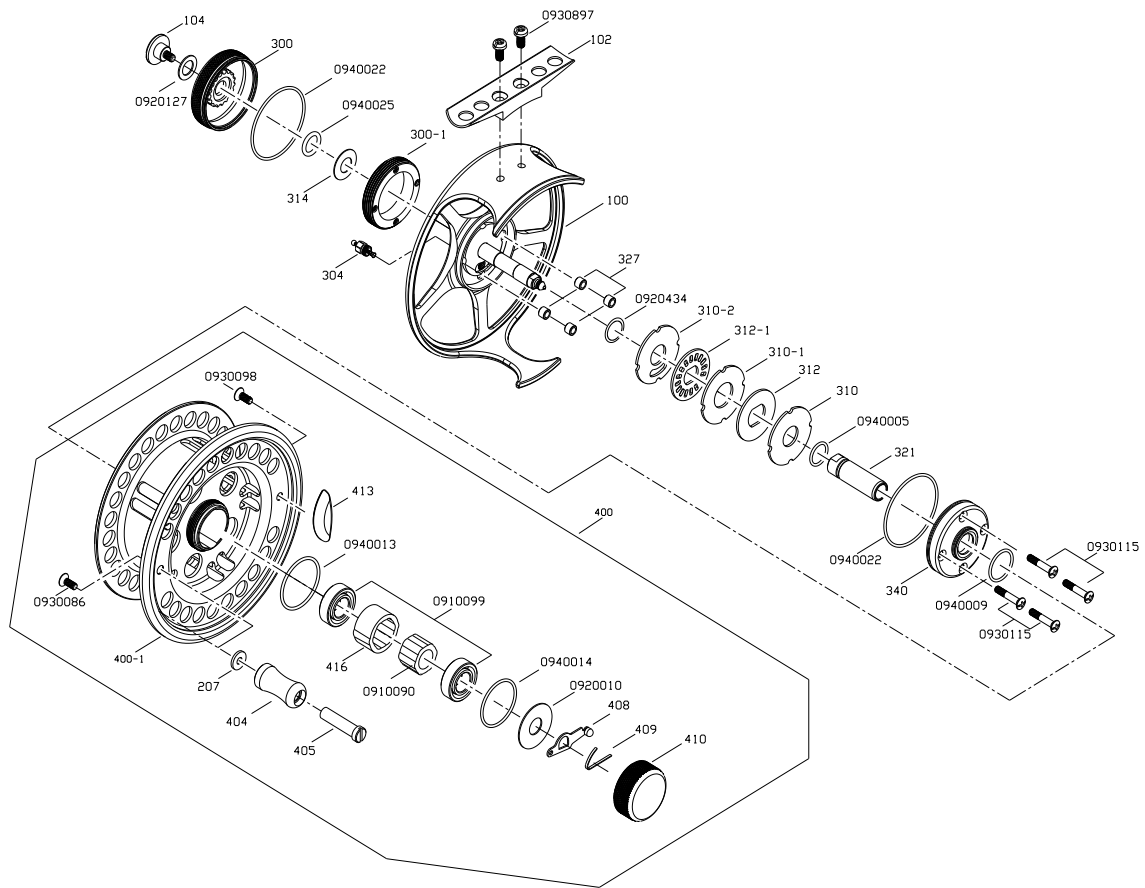

Helios 4/5 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	31000004	Body assy. (with main shaft)	408	34080009	Spool reatiner
102	31020139	Reel foot	409	34090001	Spool reatiner spring
104	31040023	Spool holder knob	410	34100037	Spool cover assy.
207	32070003	Handle knob spacer	413	34130015	Counter balance
300	33000089	Drag knob	416	34160006	Bearing bushing
300-1	33000084	Drag knob	910	0910099	One way bearing assy.
304	33040020	Click pawl	910	0910090	Ball bearing
310	33100017	Cork drag washer	920	0920010	Washer
310-1	33100033	Drag washer	920	0920127	Washer
310-2	33100020	Cork drag washer	920	0920434	Washer
312	33120004	Glaze Key washer	930	0930086	Screw
312-1	33120005	Key washer	930	0930098	Screw
314	33140002	Spring washer	930	0930115	Screw
321	332100011	Drive gear disk break	930	0930897	Screw
327	33270003	Drag knob bushing	940	0940007	O ring
340	33400003	Drag washer retainer	940	0940009	O ring
400	34000415	Spool assy.	940	0940013	O ring
400-1	34000628	Spool	940	0940014	O ring
404	34040023	Handle knob	940	0940022	O ring
405	34050012	Handle knob rivet	940	0940025	O ring